


Artikel-Nr. / Article No.:

82593

Sprachen / Languages:

de

Ersatzteilliste
 BPT-IW 1/2" Compact PR Art. 082593

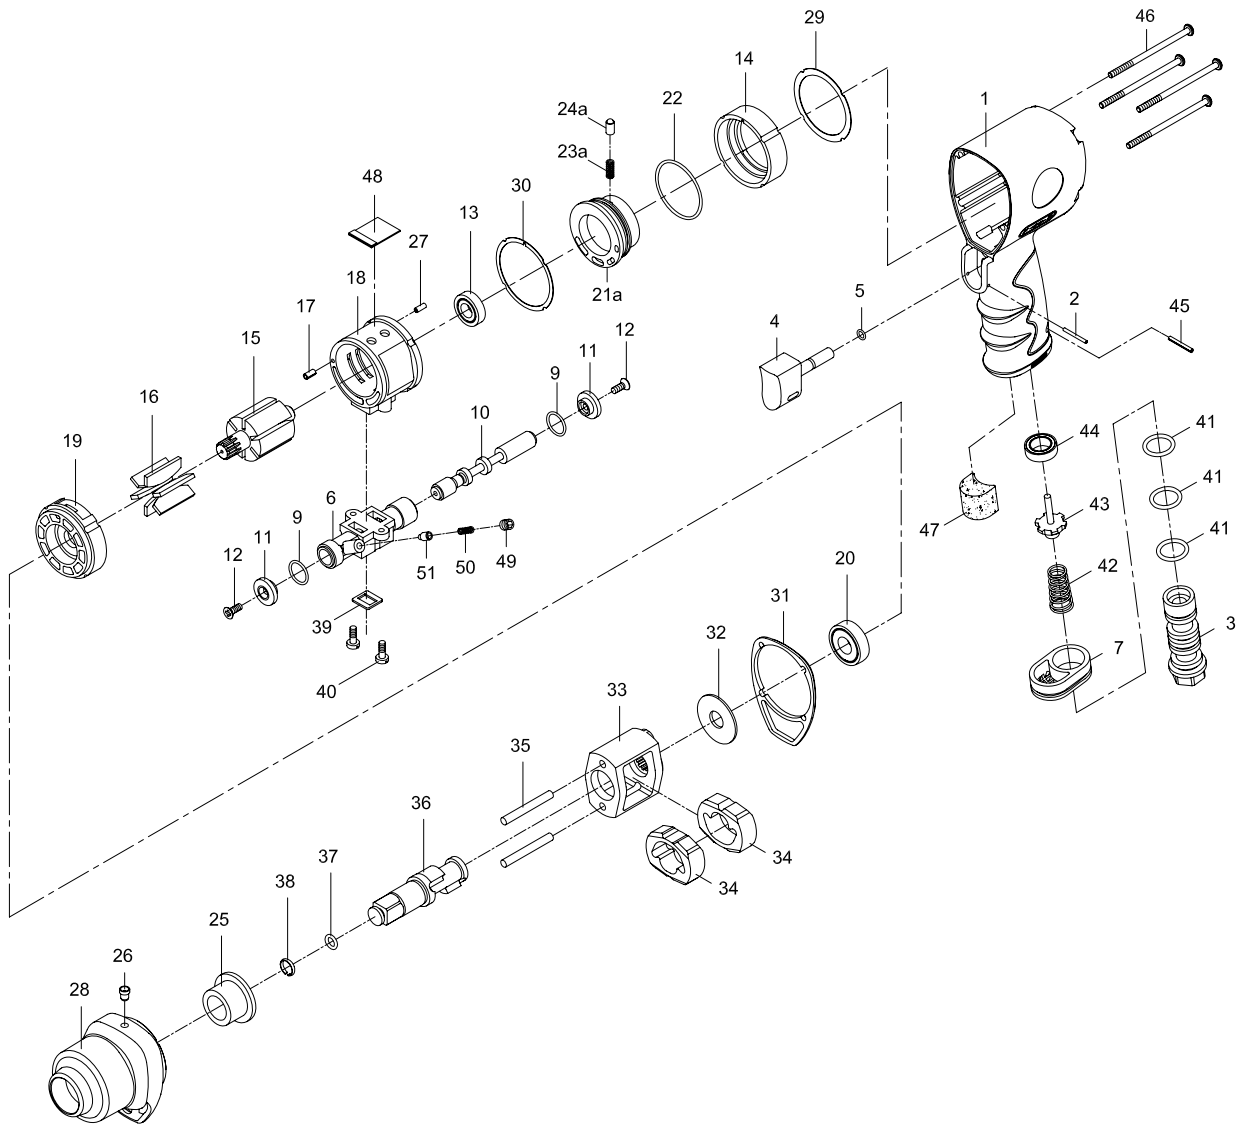

Index	Art.-Nr.	Bezeichnung	Menge
1	103896	82593 No.1 Gehäuse	1
2	89653	82594 No.2 Stift f. Drücker	1
3	43-401203	Lufteinlass	1
4	89654	82594 No.4 Drücker	1
5	89655	82594 No.5 O-Ring f. Drücker	1
6	103897	82593 No.6 Umschaltventil	1
7	89658	82594 No.7 Abluftabdeckung	1
9	89659	82594 No.9 O-Ringe Umsch.(2)	2
10	41-401210	Umschaltventil	1
11	89660	82594 No.11 Plastikkappen (2)	2
12	89661	82594 No.12 Schrauben (2)	2
13	103898	82593 No.13 Kugellager	1
14	41-401249	Feststellung	1
15	41-401215	Rotor	1
16	103899	82593 No.16 Lamellen (6)	6
17	89665	82594 No.17 Stift f. Rotor	1
18	103900	82593 No.18 Rotorgehäuse	1
19	103901	82593 No.19 Frontplatte	1
20	103902	82593 No.20 Kugellager	1
21a	103903	82593 No.21 Luftregler	1
22	103904	82593 No.22 O-Ring f. Regler	1
23a	89671	82594 No.23 Feder f. Regler	1
24a	89673	82594 No.24 Stift	1
25	103905	82593 No.25 Schlagwerkhülse	1
26	89675	82594 No.26 Ölkappe	1

Index	Art.-Nr.	Bezeichnung	Menge
27	103906	82593 No.27 Stift f. Rotor	1
28	103907	82593 No.28 Schlagwerkgehäuse	1
29	103908	82593 No.29 Dichtung f. Endpl.	1
30	103909	82593 No.30 Dichtung f. Rotor	1
31	103910	82593 No.31 Dichtung f. Schlagw.	1
32	41-401227	Scheibe	1
33	41-401208	Schlagwerkgehäuse	1
34	103915	82593 No.34 Schlagwerk (2)	2
35	103917	82593 No.35 Stifte Schlagw.(2)	2
36	103919	82593 No.36 Hammer	1
37	89685	82594 No.37 O.Ring f. Hammer	1
38	89686	82594 No.38 Stützring	1
39	89687	82594 No.39 Dichtung Lufteinl.	1
40	89688	82594 No.40 Schrauben (2)	2
41	89689	82594 No.41 O-Ringe (3)	3
42	103920	82593 No. 42 Ventilfeder	1
43	103923	82593 No. 42 Ventilbolzen	1
44	89690	82594 No.44 Distanz gummi	1
45	89691	82594 No.45 Stift	1
46	103925	82593 No.46 Schrauben Geh. (4)	4
47	103926	82593 No.47 Schalldämpfer	1
48	103928	82593 No.48 Schalldämpfer	1
49	89695	82594 No.49 Stellschraube	1
50	89696	82594 No.50 Feder	1
51	89697	82594 No.51 Stift	1